PS3™ QUICKFIRE CONTROLLER

User's Manual

bigben interactive

Thank you for purchasing the Quickfire controller for PS3™ from Bigben Interactive.

This product includes:

- 5 Preset quick fire modes for all your favourite games.
- Clear LCD screen.
- 8 shots per second up to 48 shots per second.
- Custom firing mode – set your own quick fire rate from 6 shots per second up to a blistering 60 shots per second.
- Program any action buttons for rapid fire.
- Tilt sensors and vibration.
- Ergonomic, non slip triggers.
- Supplied with 2 AA Alkaline batteries.

Controller Set-Up and Use

Battery Installation

1. Remove the battery compartment cover from underneath the controller
2. Insert 2 x 1.5 volt AA size batteries, observing the correct polarity
3. Refit the battery compartment cover

Using the Controller with a PS3™.

Slide the switch on the Receiver Unit to PS3™ mode.

Receiver Connection

Plug the Receiver Unit into one of the USB ports on your PS3™ console. The Red LED on the Receiver Unit will flash constantly.

Using your Controller

1. Switch on the controller by sliding the power On/Off switch, on the Controller, to on. When the controller has successfully connected with the Receiver Unit the Red LED, on the receiver, will stop flashing and be lit continuously.
2. Press the `PS Home' button on the centre of the controller. This is the button with the house symbol.
3. The controller will connect to your PlayStation®3 console and the numbered Red LED's will light up showing your controller number.
4. Ensure that your contoller is assigned as controller 1.
   If it is not recognised as controller 1, press and hold the home button to bring up the option menu, while you have a game loaded.
   Select the controller settings and then select the 'Reassign the Controller' option.
   Scroll down with the d-pad on the rifle until it says 1 on the TV screen.
   Press X to select it and then press O twice to go back to your game.

For further information on assigning controller ports please refer to your console instruction manual.

Quick fire modes

The Quickfire controller has 6 different quick fire modes to suit all of your favourite shooting games. The controller is set to mode 1, 8 shots per second by default.
The mode is displayed on the LCD screen as M1 08SPS. Quick fire is set to the R1 button of your controller as this is the most common firing button for shooting games.

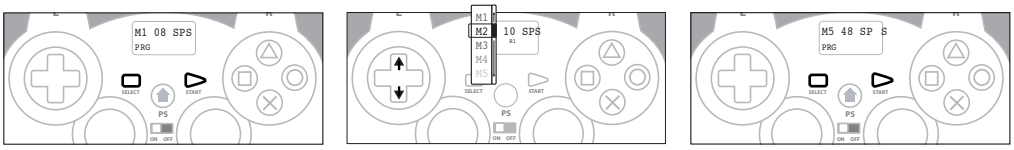

Changing the quick fire modes

The quick fire modes have been designed to work on all of your shooting games. To ensure full compatibility please select the correct mode for your game.

The modes are as follow:

M1 8SPS – Call of Duty 4 Modern Warfare
M2 10SPS – Call of Duty World at War and Call of Duty: Black Ops
M3 20SPS – Call of Duty Modern Warfare 2
M4 32SPS – Call of Duty Modern Warfare 2
M5 48SPS - Call of Duty Modern Warfare 2

Please note that modes M4 and M5 may have varied results depending on which guns you are using in the game. If you experience any problems, stick with the M3 mode. These modes will also work with other popular shooting games, like Battlefield™, Killzone™, Resistance™ etc. Try the different modes to select which works best.

To change between modes follow these steps.

1. Press start and select simultaneously to enter the programming mode.
2. Press up or down on the D-pad to cycle through the different modes.
3. When you have found your correct mode press start and select again to confirm your selection.
4. The controller will now fire at your chosen speed when you press R1.

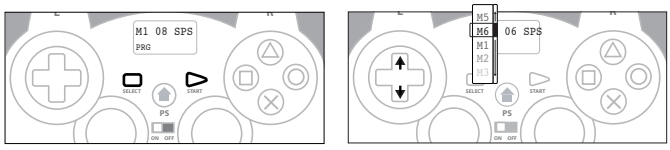

Custom quick fire mode

The quick fire controller also includes a custom mode to ensure future compatibility with new games and so you can experiment with different firing rates. The rates can range for 6 shots to 60 shots per second.

To set the custom firing rates follow these steps:

1. Press start and select simultaneously to enter the programming mode.
2. Press up or down on the D-pad to cycle through the different modes and choose M6.
3. Then press the select button to enter the shots mode.
4. Press up or down on the D-pad to choose the shots per second you want.
5. Press start and select again to confirm your selection.
6. The controller will now fire at your chosen rate when you are in M6 mode.

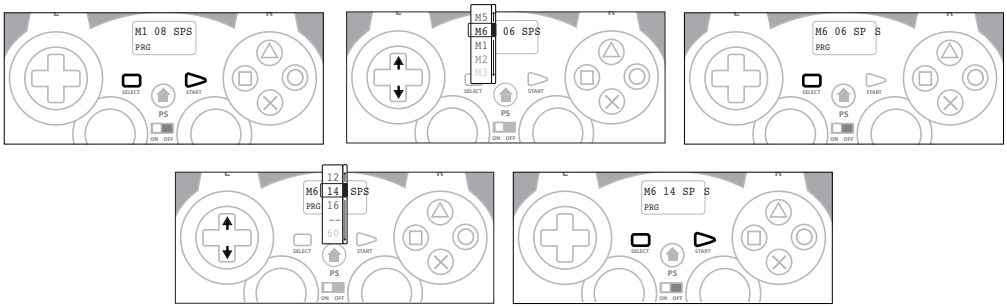

Programming other buttons for rapid fire

By default, only the R1 button is used for quick fire, but if you are playing games that use another button for firing, you can also program them.

To set other buttons for quick fire, follow these steps:

1. Press the select and PS Home button on the controller simultaneously to enter the button programming mode. The LCD screen will then display PRG.
2. Press the button you wish to program as quick fire (i.e. the triangle button) A triangle symbol will then appear on the LCD screen to indicate it has been pressed.
3. Press select and PS Home again to confirm your selection. The triangle button will now act in quick fire mode. The button will remain as a quick fire button even when you switch off your controller

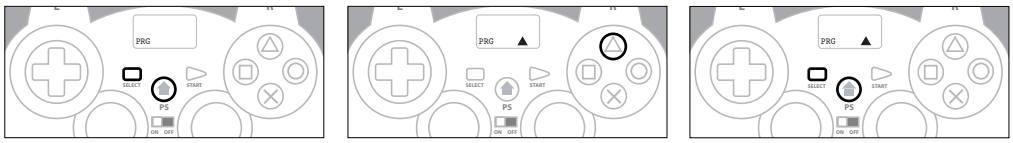

To set the button back to normal, follow these steps.

1. Press the select and PS Home button on the controller simultaneously to enter the button programming mode. The LCD screen will then display PRG.
2. Press the button you wish to clear as quick fire (i.e. the triangle button) The triangle symbol will then disappear from the LCD screen to indicate it has been pressed.
3. Press select and PS Home again to confirm your selection. The triangle button will set back to normal.

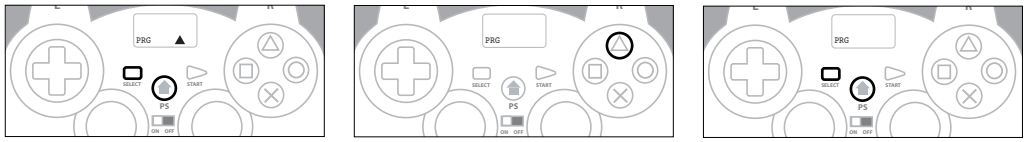

Disable Quick fire on R1 button

If you do not want rapid fire on the R1 button you can disable it in the same way as mentioned above

1. Press the select and PS Home button on the controller simultaneously to enter the button programming mode. The LCD screen will then display PRG.
2. Press the R1 The R1 symbol will then disappear from the LCD screen to indicate it has been pressed.
3. Press select and PS Home again to confirm your selection. The R1 button will set back to normal and will no longer have quick fire.

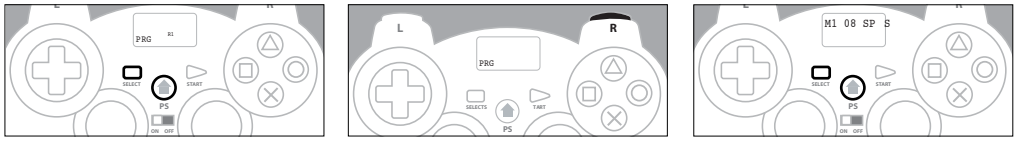

Clearing all programming

If you wish to set your controller back to default, simply switch it off and switch it back on again, whilst holding the start and select buttons simultaneously. All controls will then be set to standard factory settings.

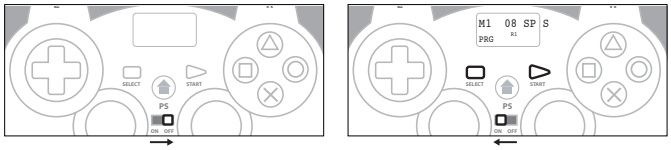

Troubleshooting.

Controller is not working.

- Ensure that the power button is the 'On' position.
- Check that the batteries are not low. If so, replace the batteries. If power is low the Player LED will normally flash to indicate that the batteries need replacing.
- Ensure that the receiver is connected to the console and press the home button on the controller to connect.
- Check that the switch on the receiver is set to PS3™ mode.

The guns are not working or jamming in my game

Check that you have selected the correct mode for your game. If the guns are still jamming, try a lower firing rate mode or create a custom mode that works.

The guns are not quick firing

- Check that the game you are playing uses R1 for firing. If not program the firing button for that game (i.e. program R2 for rapid fire)
- Ensure that you have not un-programmed firing button. If so, reprogram it.

All my buttons are rapid firing

Clear all of the programming by switching off and switching on again whilst pressing and holding the start and select buttons.

CE

Usage of this product is authorized in:
AT - BE - DK - UK - FI - FR - DE - GR - IE - LU - NL - PT - ES - SE - IS - LI - NO - CH - ITU

R&TTE Declaration of conformity (DoC) see www.bigben.eu

Deutsch	Hiermit erklärt Bigben Interactive, dass dieses Gerät den Anforderungen der Europäischen Richtlinie 1999/5/EG entspricht.
English	Bigben Interactive hereby declares this device to be in compliance with the requirements of European Directive 1999/5/EC.
Dansk	Hermed erklærer Bigben Interactive, at dette apparat er i overensstemmelse med kravene i det europæiske direktiv 1999/5/EF.
Español	Por la presente, Bigben Interactive declara que este aparato es conforme a las disposiciones de la directiva europea 1999/5/CE.
Suomi	Bigben Interactive vakuuttaa, että tämä laite täyttää EU-direktiivin 1999/5/CE vaatimukset.
Français	Par la présente Bigben Interactive déclare que cet appareil est conforme aux exigences de la directive européenne 1999/5/CE.
Ελληνικά	Με την παρούσα η Bigben Interactive βεβαιώνει ότι η συσκευή αυτή πληροί τις απαιτήσεις της ευρωπαϊκής οδηγίας 1999/5/CE.
Italiano	Con la presente, Bigben Interactive dichiara che questo apparecchio è conforme ai requisiti della direttiva europea 1999/5/CE.
Nederlands	Hierbij verklaart Bigben Interactive dat dit toestel in overeenstemming is met de vereisten van de Europese richtlijn 1999/5/EG.
Português	A Bigben Interactive declara pela presente que este aparelho está em conformidade com as exigências da directiva europeia 1999/5/CE.
Svenska	Bigben Interactive intygar härmed att denna enhet uppfyller kraven i direktivet 1999/5/EG.

Disposal of Old Electrical & Electronic Equipment

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.
By ensuring that this equipment is disposed of correctly you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
The recycling of materials will help to conserve natural resources.
For more information please contact your local council or waste disposal service.

Important Safeguards & Precautions

1. This Unit is for indoor use only.
2. Do not expose to dust, direct sunlight, wet weather conditions, high humidity, high temperatures or mechanical shock.
3. Do not expose the unit, to splashing, dripping rain or moisture. Do not immerse in liquid.
4. Do not disassemble; there are no serviceable parts inside.
5. Do not use if the equipment is damaged.
6. Never carry the unit by its cables.
7. For external cleaning, use a soft, clean, damp cloth only.
8. Use of detergents may damage the cabinet finish.
9. Only use the cables that are supplied with this equipment.
10. The socket-outlet shall be installed near the equipment and shall be easily accessible.
11. If the power cable is damaged, it must be replaced by the manufacturer, its after-sales service or by a similarly qualified person in order to avoid any dangers.
12. This device is not designed to be used by anyone (including children) with impaired physical, sensory or mental capacity, or by anyone without appropriate experience or knowledge unless they have received prior guidance or instructions related to the use of this device from someone who is responsible for their safety. Children should be supervised to ensure that they do not play with the device.

Battery Leakage

Important Safeguards & Precautions

1. This Unit is for indoor use only.
2. Do not expose to dust, direct sunlight, wet weather conditions, high humidity, high temperatures or mechanical shock.
3. Do not expose the unit, to splashing, dripping rain or moisture. Do not immerse in liquid.
4. Do not disassemble; there are no serviceable parts inside.
5. Do not use if the equipment is damaged.
6. Rechargeable batteries are to be removed from the equipment before being charged.
7. Rechargeable batteries are only to be charged under adult supervision.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Do not mix used and new batteries (replace all batteries at the same time).
11. Do not mix different brands of batteries.
12. Do not leave batteries in this product for long periods of non-use.
13. Do not put the batteries in backwards. Make sure that the positive (+) and negative (-) ends are facing in the correct directions. Insert the negative end first. When removing batteries, remove the positive end first.
14. Do not dispose of batteries in a fire.

To avoid battery leakage

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Exhausted batteries are to be removed from the toy.
5. The supply terminals are not to be short-circuited.
6. Do not mix used and new batteries (replace all batteries at the same time).
7. Do not mix different brands of batteries.
8. We recommend the use of alkaline batteries.
9. Do not leave batteries in this product for long periods of non-use.
10. Please read the battery instructions very carefully if using rechargeable batteries.
11. Do not put the batteries in backwards. Make sure that the positive (+) and negative (-) ends are facing in the correct directions. Insert the negative end first. When removing batteries, remove the positive end first.
12. Do not dispose of batteries in a fire.

Important Safety Notice

Leakage of battery acid can cause personal injury as well as damage to your product.
If leaked battery fluid comes into contact with your eyes, immediately flush your eyes thoroughly with water and see a doctor, as it may result in blindness or other injury.
If leaked battery fluid comes into contact with your body or hands, wash thoroughly with water.
If leaked battery fluid comes into contact with the product, carefully wipe the product, avoiding direct contact with your hands.

Dispose of batteries in accordance with Local and National Disposal Regulations.

1. If at any time whilst using this product you feel pain, weakness, numbness or tingling in your hands, wrists, elbows or shoulders we recommend that you cease using it until these symptoms subside.
2. We recommend that you take frequent breaks of fifteen minutes every hour & hold the controller with a light grip while playing a game.

TECHNICAL HELPLINE INFORMATION

The Technical Helpline is a live one-to-one service
UK: 0905 710 0015
Hours: 10:00am till 5:00pm, Monday to Friday
(All calls are charged at 30 pence per minute. All callers must be over 16 years of age. Permission must be obtained from the person paying the bill. Parental supervision is recommended).
Eire: 154 056 3001
Hours: 10:00am till 5:00pm, Monday to Friday
(All calls are charged at 60 euro cents per minute. All callers must be over 16 years of age. Permission must be obtained from the person paying the bill. Parental supervision is recommended).

To ensure that your call is handled quickly and effectively please ensure that you have the model number and any other relevant information regarding your product.
Calls may be recorded for training purposes.